


## UNIVERSAL

REF 22331N

**FAROS AUXILIARES / AUXILIARY SPOTLIGHTS**

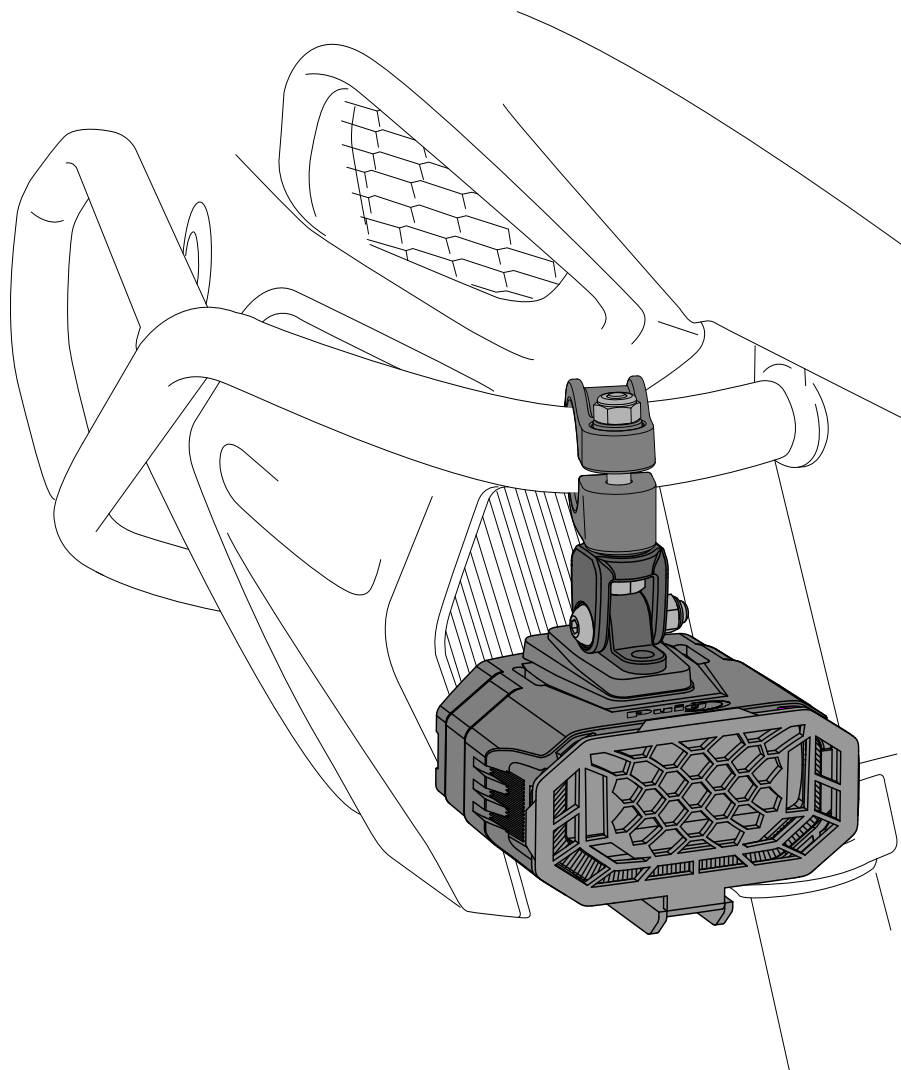

**CONSULTAR EN NUESTRA PAGINA WEB LA DISPONIBILIDAD DEL VIDEO DE MONTAJE DE ESTA REFERENCIA.**

**CONSULT OUR WEBSITE THE VIDEO MOUNT AVAILABILITY OF THIS REFERENCE.**


**www.puig.tv**

# UNIVERSAL


REF  
22331N

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

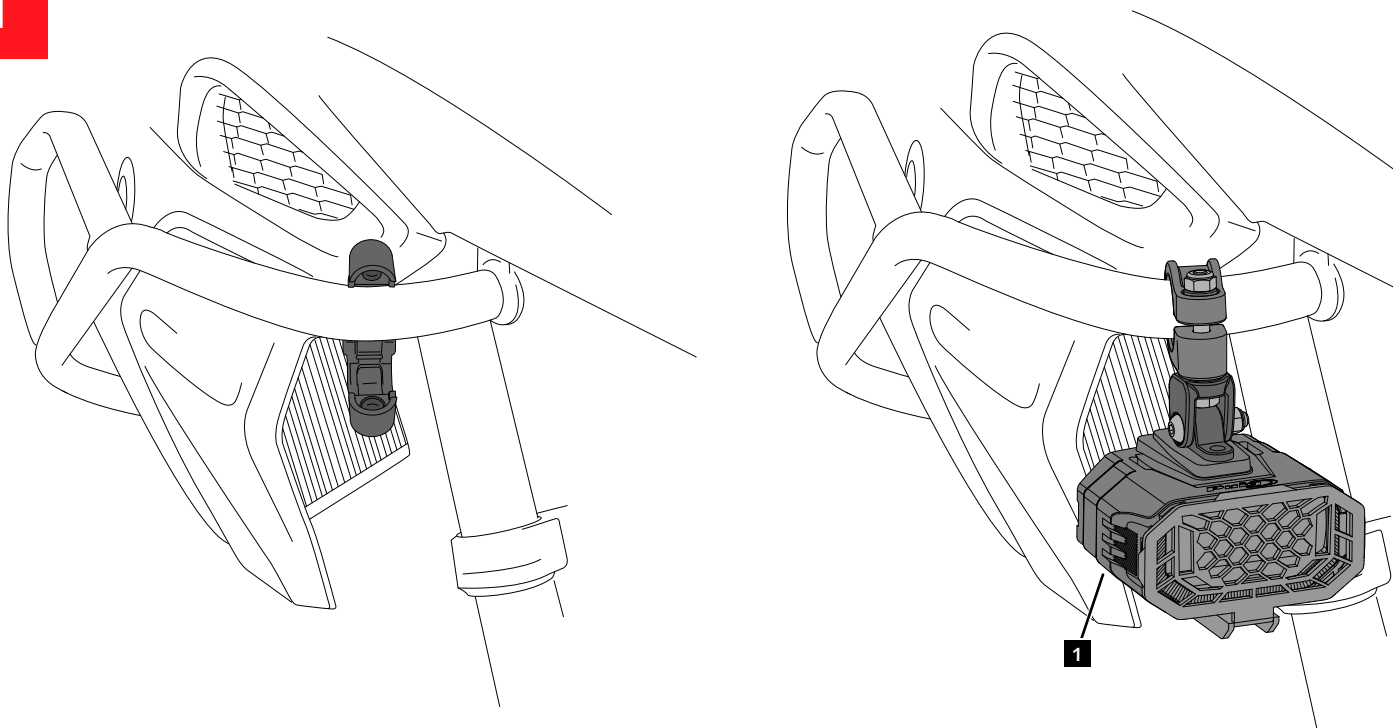

2

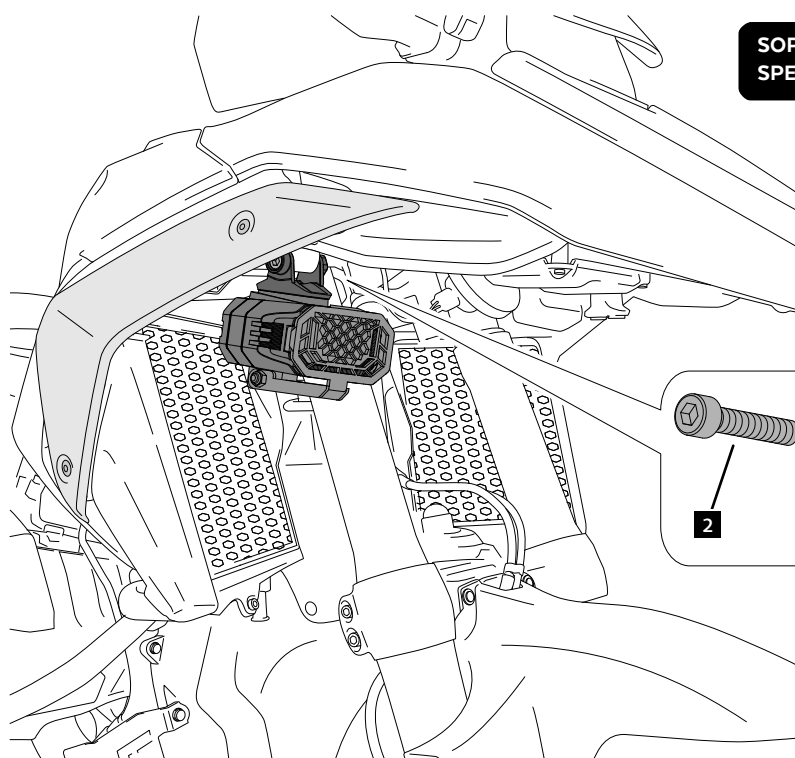

SOPORTE ESPECÍFICO PARA BMW R1300GS  
SPECIFIC SUPPORT FOR BMW R1300GS

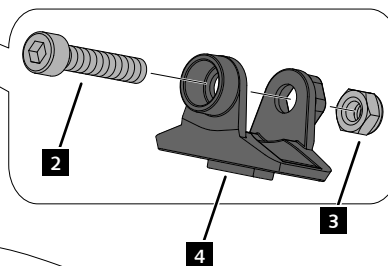


# UNIVERSAL




REF  
22331N

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

## ESQUEMA ELÉCTRICO / CIRCUIT DIAGRAM

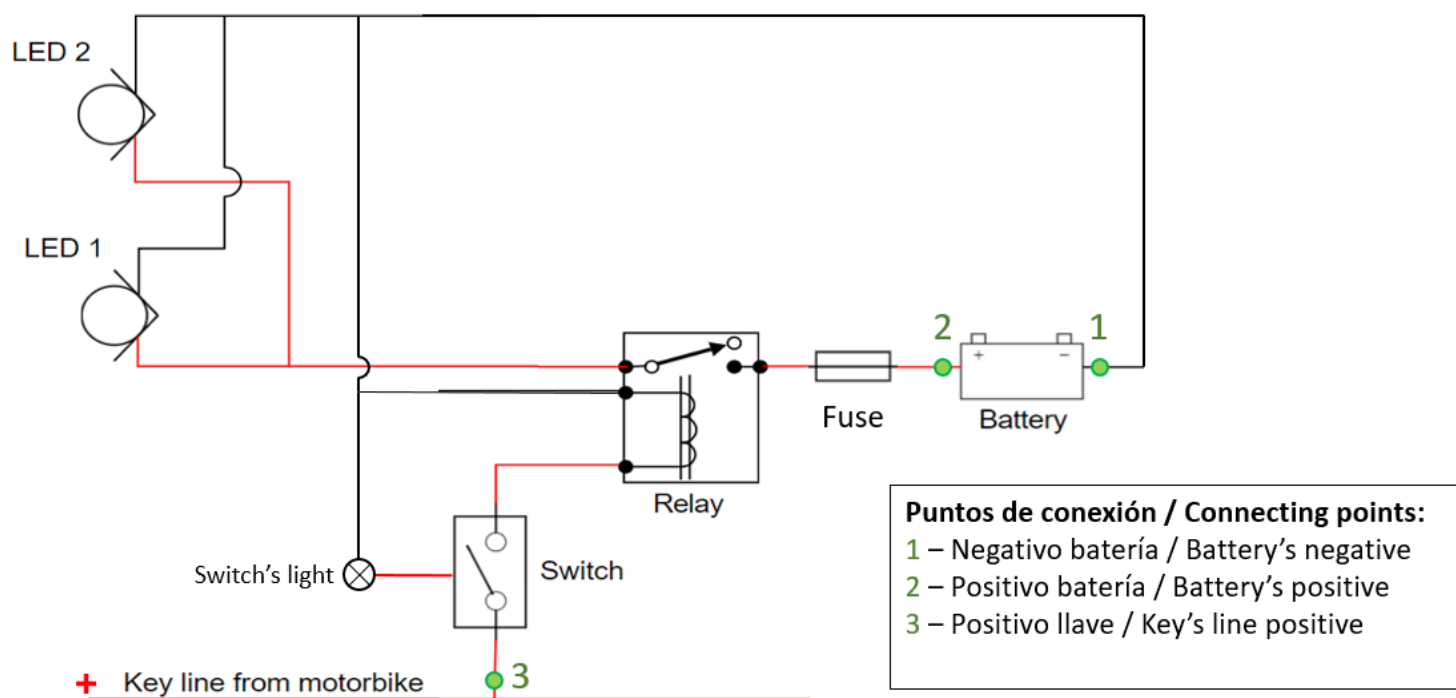

Accesorio verificado en la configuración básica de la motocicleta. Para modelos con configuraciones adicionales de fábrica, no podemos asegurar su compatibilidad a menos que se realice una consulta previa. Declinamos cualquier reclamación eventual.  
 Accessory verified in the basic configuration of the motorcycle. For models with additional factory settings, we cannot guarantee its compatibility, except with prior consultation. We decline any potential claims.
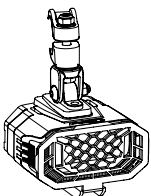
| ID. | PIEZA / PART                                                                        | DESCRIPCIÓN   | DESCRIPTION         | QTY. | REF.:      |
|-----|-------------------------------------------------------------------------------------|---------------|---------------------|------|------------|
| 1   |  | Faro Auxiliar | Auxiliary Spotlight | 2    | REF.22331N |
| 2   |  | Tornillo      | Screw               | 2    | N/A        |
| 3   |  | Tuerca        | Nut                 | 2    | N/A        |
| 4   |  | Soporte       | Support             | 2    | N/A        |