

TRIUMPH SCRAMBLER 400X '24- / SPEED 400 '24- / SCRAMBLER 400XC '25-

M O U N T I N G I N S T R U C T I O N S

REF 21933

WINDSHIELD NG SPORT - CARENABRÍS NG SPORT



1 Person




30 min



EASY



ALLEN



N° 3
N° 6

ID.	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Cúpula Sport	Sport Screen	1	21933W/H/N/F/JM3
2		Soporte izquierdo	Left support (L)	1	SOPOR2P5-L21933
3		Soporte derecho	Right support (R)	1	SOPOR2P5-R21933
4		Casquillo Ø13xØ8x15mm	Ø13xØ 8x15mm Arrowhead	2	CASQUI-M----614
5		Tornillo allen M8x45 DIN912	M8x45 DIN912 screw	2	TORNI-AD912-508
6		Silentblock Ø9xØ6x8mm	Ø9xØ6x8mm Silentblock	4	AROPASACABLES-3
7		Casquillo con valona Ø12xØ6,8x7,3	Ø12xØ6,8x7,3 Bush with flange	4	CASQUI-1A---750
8		Tornillo allen M5x12 Ø11 ISO 7380	M5x12 Ø11 ISO 7380 Allen screw	4	TORNI-AI----520
9		Tapon tornillo M5 ISO 7380	M5 ISO 7380 screw cap	4	TAPON-----85


TRIUMPH SCRAMBLER 400X '24- / SPEED 400 '24- / SCRAMBLER 400XC '25-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

DISASSEMBLY ONLY FOR SCRAMBLER 400XC


1

DISASSEMBLY
DESMONTAJE

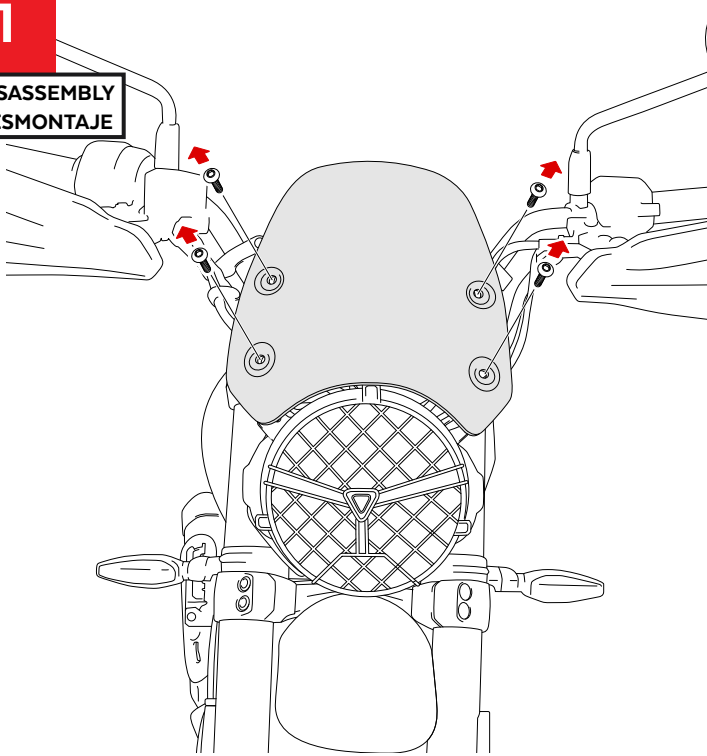


2

DISASSEMBLY
DESMONTAJE

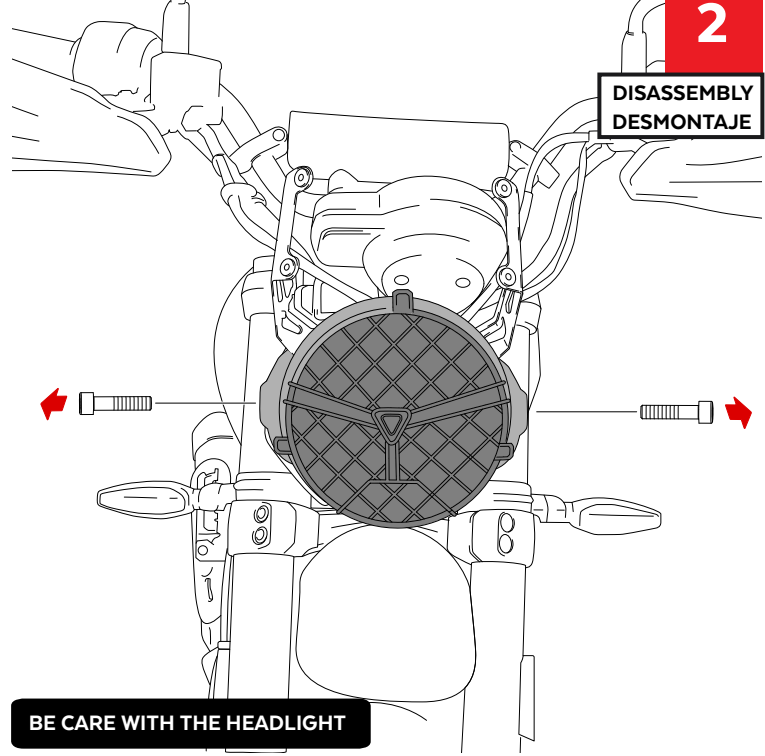


3

DISASSEMBLY
DESMONTAJE

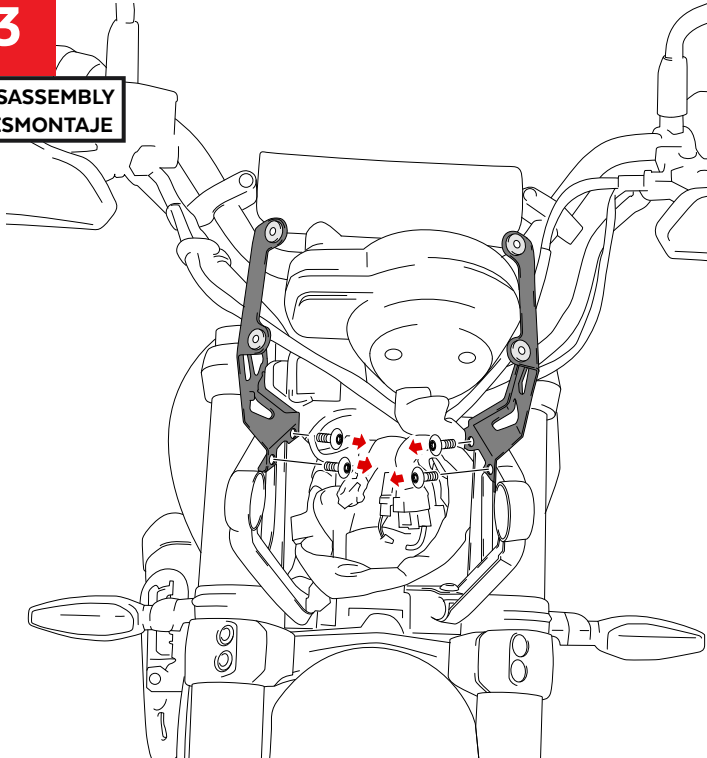

4

ASSEMBLY
MONTAJE

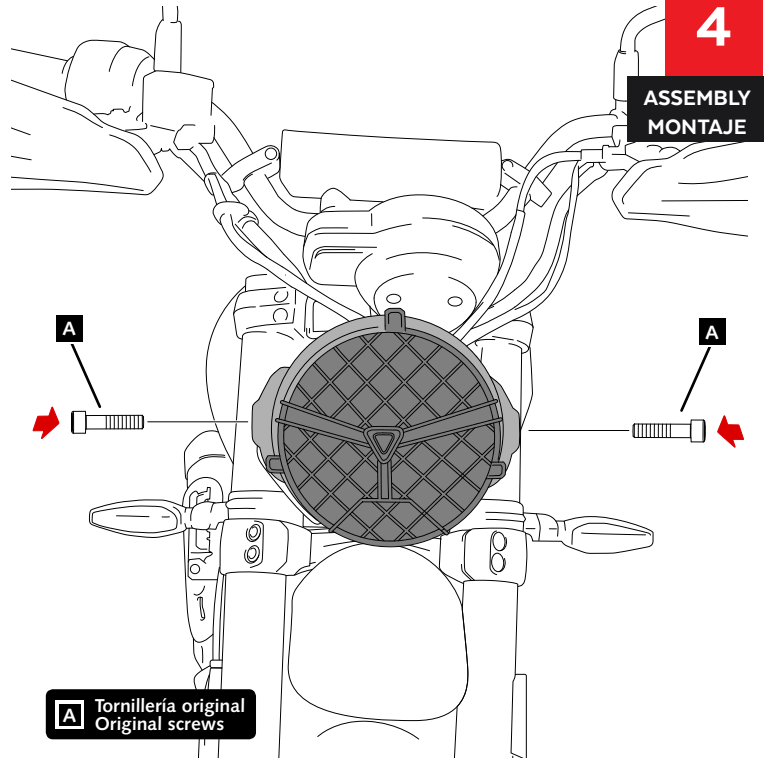


TRIUMPH SCRAMBLER 400X '24- / SPEED 400 '24- / SCRAMBLER 400XC '25-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1


DISASSEMBLY
DESMONTAJE

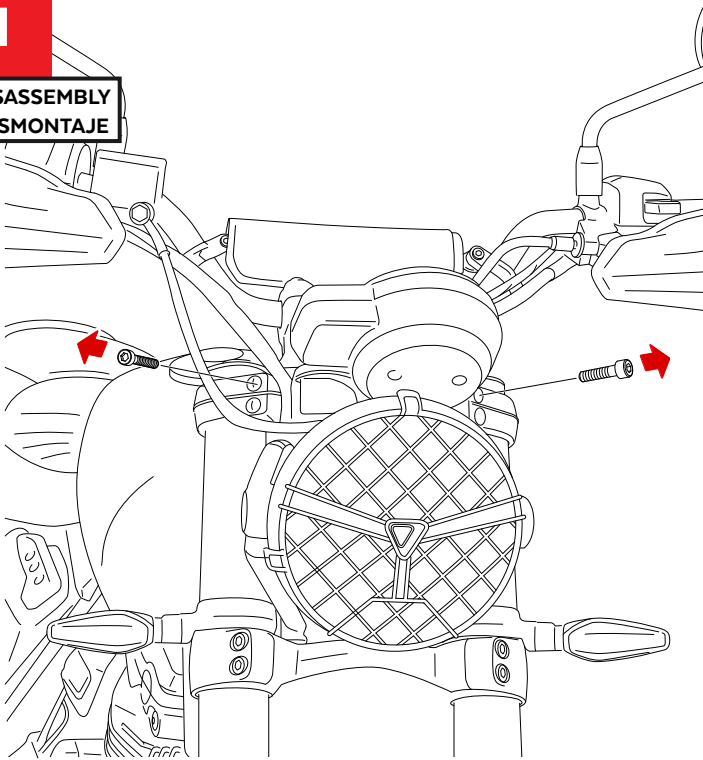

2


ASSEMBLY
MONTAJE

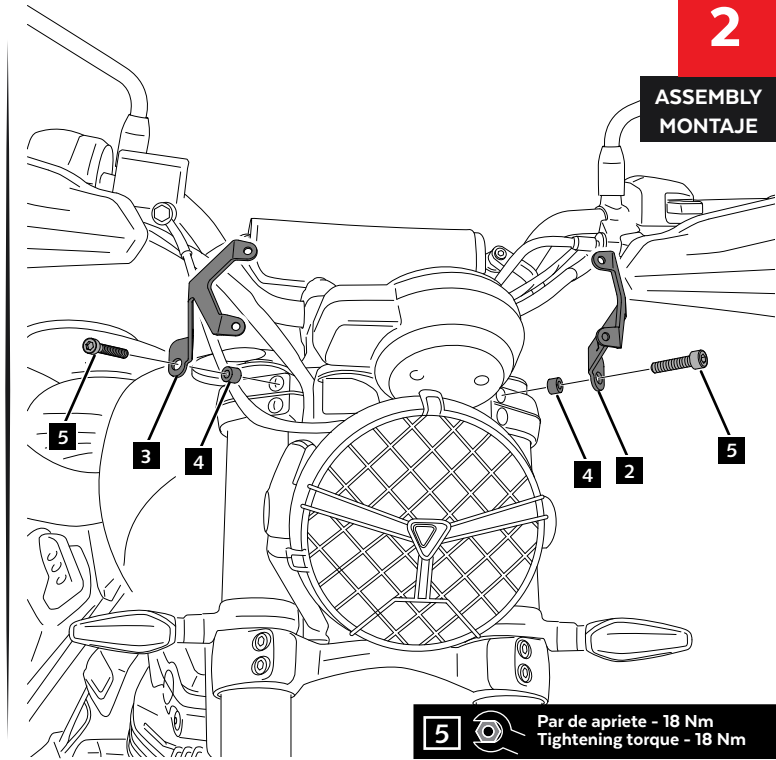


5  Par de apriete - 18 Nm
Tightening torque - 18 Nm

3

ASSEMBLY
MONTAJE

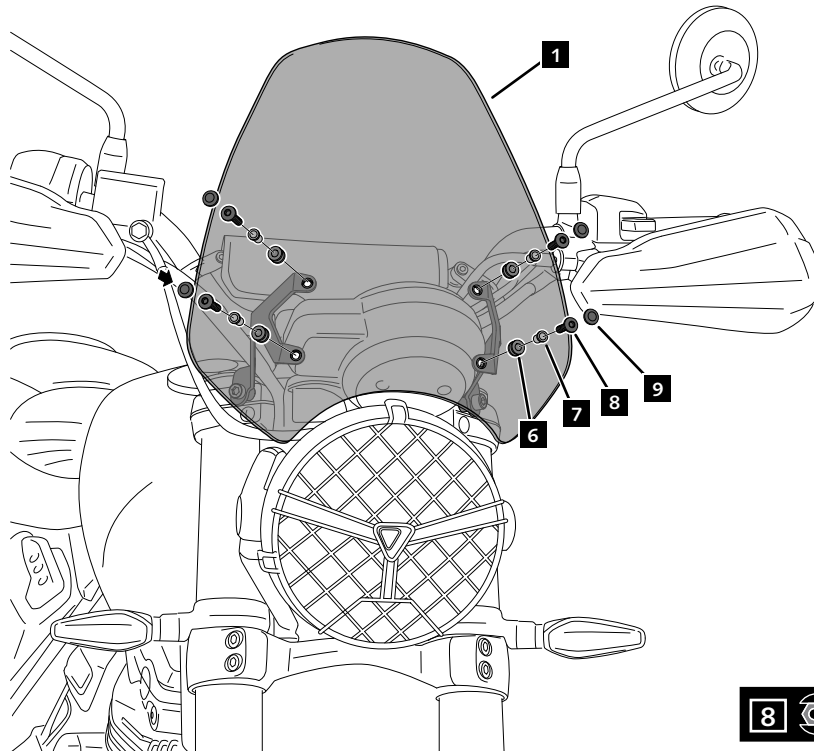

8  Par de apriete - 3 Nm
Tightening torque - 3 Nm